

TABLE des MATIERES

	Pages
1 - General	5
2 - Security	6
a) Device	6
b) User	7
3 - Pu into service	8
a) Unpacking the unit	8
b) Installation.....	8
c) Test run after installing	10
4 - Procedure	11
a) Generality.....	11
b) Procedure models BA2-1B to 10B	12
c) Procedure models with calculator	14
1 - Button functionality F1 : realization of a calibration with the calculator.....	15
: Dead weight leakage time	23
2 - Button functionality F2 : visualization of the piston.....	25
3 - Button functionality F3 : adjustable parameters and ambient data.....	26
4 - Button functionality F4 : dead weight configuration	27
: sensors calibration.....	31
: calculation test mode	33
: special functions	35
5 - Calibration/Certificate	36
6 - Cleaning/Maintenance	38
a) Daily maintenance	38
b) Full review.....	39
7 - Annexes	40
Options.....	40
Accessories	40
Consumables	41



Read the instructions before handling and retain this information for future use

All rights reserved AREMECA